# Gooch & Housego



# **Description:**

The MQH0XX-YYDM-ZZZ-2S module is a High Power RF Driver with two RF outputs derived from one oscillator and is designed to drive two Q-Switches. There are two digital modulation control inputs: Fixed and Variable. These controls allow the customer to issue a pulse command of a "Fixed" pulse width, the duration determined by the Driver's pulse width control, settable by the customer, or issue a "Variable" pulse command, the duration determined by the input signal's pulse width. The output power of both channels are controlled by the analog input, where the mode of operation is defined by ZZZ = A05 normal analog mode, or R05 analog switched to full RF mode or a triggered RF Ramp Down mode where ZZZ = FPS first pulse suppression mode or PPK mode. pre-pulse kill The choices of Frequency (XX), Output Power (YY), and Power Control (ZZZ) option are "Factory Set" when ordered. The driver requires forced air cooling.

The product delivered will be manufactured to be compliant with EU Directive 2011/65/EU for Reduction of Hazardous Substance. The product will be manufactured to other standards upon customer request. *High Power 2 Channel RF Driver: For 2 Acousto-optic Q-Switches* 

# MQH0XX-YYDM-ZZZ-2S

Former Model Number: 390XX-YYDMZZZ-2CH-A

# Key Features:

- 24, 27.12, 40.68, 68, or 80 MHz RF Frequency (XX)
- 0.01% Quartz Stabilized
- 2 Outputs with up to 50 watts RF power output (YY) per channel (2S)
- Two TTL Digital Modulation Inputs: fixed and variable pulse width.
- Up to 100 kHz pulse rate.
- Analogue Modulation or Triggered RF Ramp Down Mode (ZZZ)
- Fault Protection on Low Power, High Power, and High VSWR
- Operates on 28 VDC

# Applications:

- RF Driver for an Acousto-Optic Q-Switch Device used spoiling the "Q" of a CW laser so as to output an intense pulse of light.
- Used in industrial, medical, or military applications.

IWDS039 V1.0

Contact: sales@goochandhousego.com

www.goochandhousego.com

As part of our policy of continuous product improvement we reserve the right to change specifications at any time

Page 1 of 11

# MQH0XX-YYDM-ZZZ-2S

#### **SPECIFICATIONS**

#### SPECIFICATION:

| PARAMETER:                                                                                | SPECIFICATION:                                                                                                                                                                                                                |
|-------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Number of Channels                                                                        | 2 Outputs ( <u>RF Power Split from One Oscillator</u> .)                                                                                                                                                                      |
| Output Frequency:                                                                         | <b>XX</b> = 24, 27, 41, 68, or 80<br>Where RF Frequency = 24.00, 27.12, 40.68, 68.00, 80.00 MHz ± 0.01%                                                                                                                       |
| Spurious Levels:                                                                          | -50 dBc maximum                                                                                                                                                                                                               |
| Harmonic Distortion                                                                       | -30 dBc maximum                                                                                                                                                                                                               |
| Digital Inputs:<br>Fixed Mod In<br>Variable Mod In                                        | <u>Modulation Common to Both Outputs</u> .<br>TTL Levels, Triggered on Rising Edge. Pulse Width Applied >50 ns.<br>TTL Levels, TTL HIGH = RF off                                                                              |
| Extinction Ratio:                                                                         | 35 dB minimum                                                                                                                                                                                                                 |
| RF Rise Time 10% to 90%                                                                   | 500 ns maximum                                                                                                                                                                                                                |
| RF Fall Time: 90% to 10%                                                                  | 100 ns maximum                                                                                                                                                                                                                |
| Modulation Repetition Rates:                                                              | 1 Hz to 100 kHz for Fixed Modulation<br>DC to 100 kHz for Variable Modulation                                                                                                                                                 |
| Fixed Modulation                                                                          | Output Pulse Width Adjustment Range: 1 to 14 $\mu$ s, Customer Adjustable                                                                                                                                                     |
| Available Pulse Control Options:<br>Pulse Control Mode is " <u>Factory Set When Orde</u>  | ZZZ = Modered":FPS = First Pulse SuppressionSee Figure 2PPK = Pre Pulse KillSee Figure 3A05 = Analog ControlSee Figure 4R05 = RF Switched to Analog ControlSee Figure 5 = Digital Modulation OnlySee Figure 6                 |
| FPS Trigger / Analog input                                                                | Units Configured With FPS, PPK: TTL Levels, Triggered on TTL Rising Edge.                                                                                                                                                     |
|                                                                                           | Units Configured With A05, R05: 0 to 5 Volts Analog.                                                                                                                                                                          |
| RF Output Power Per Channel " <u>Factory Set Wh</u><br>Both Outputs Must Have 50 ohm Load | <ul> <li><u>hen Ordered</u>": <u>YY</u> = 50 watts nominal for 24, 27, and 41MHz units</li> <li>Adjustable from 12 to 50 watts.</li> <li>*25 watts nominal for 68 and 80 MHz unit, Adjustable from 12 to 25 watts.</li> </ul> |
| Output Impedance:                                                                         | 50 ohms Nominal                                                                                                                                                                                                               |
| Shutter Output:                                                                           | 0.3 sec delay. Opens on fault.<br>Capable of sinking 1 amp at 28 volts maximum.                                                                                                                                               |
| Supply Voltage Input                                                                      | +28 VDC ± 1%                                                                                                                                                                                                                  |
| Supply Current Input                                                                      | 6.5 A for 25 W /ch units 9.0 A for 50 W /ch units                                                                                                                                                                             |
| Operating Temperature                                                                     | +10°C to +55°C                                                                                                                                                                                                                |
| Air Flow through Heat Sink                                                                | > 36 CFM (> 17 litres / second) @ 25°C                                                                                                                                                                                        |
| MAXIMUM RATINGS:                                                                          |                                                                                                                                                                                                                               |
| Supply Voltage:                                                                           | 30 volts DC maximum                                                                                                                                                                                                           |
| Power Output:                                                                             | No DC Feedback allowed                                                                                                                                                                                                        |
| Storage Temperature:                                                                      | -20°C to +85°C                                                                                                                                                                                                                |

Page 2 of 11

| CONNECTORS & MECHANICAL:                                                                 |              | <u>AL</u> :                                                                                                 | Located on front panel                                                                     |
|------------------------------------------------------------------------------------------|--------------|-------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| RF Output Connector:                                                                     |              |                                                                                                             | BNC Female                                                                                 |
| Power Supply Connections:                                                                |              |                                                                                                             | Vcc Solder Post<br>Return Ground Lug                                                       |
| 25PIN SUB D CONNECTOR PINOUT:                                                            |              | CTOR PINOUT:                                                                                                | Located on front panel See Detail A of Outline Drawing.                                    |
| 1                                                                                        | +5V          | +5V output for externa                                                                                      | l fault indicators, 75 mA available.                                                       |
| 2 – 3                                                                                    | NC           | No connection.                                                                                              |                                                                                            |
| 4                                                                                        | THERM RTN    | Ground – to be used a                                                                                       | as a return for Both THERM and THERM 2.                                                    |
| 5                                                                                        | THERM 2      | Thermostat connection                                                                                       | n – driver enters a fault condition unless this is shorted to ground.                      |
| 6                                                                                        | THERM        | Thermostat connection                                                                                       | n – driver enters a fault condition unless this is shorted to ground.                      |
| 7                                                                                        | DRV TEMP     | Normally HIGH, goes                                                                                         | LOW when the driver is in an overheat fault.                                               |
| 8                                                                                        | QS TEMP      | Normally HIGH, goes                                                                                         | LOW when no short present on THERM.                                                        |
| 9                                                                                        | HVSWR        | High VSWR fault, norr                                                                                       | mally HIGH, goes LOW during fault.                                                         |
| 10                                                                                       | LP           | Low RF Power indicator, normally HIGH, goes LOW while driver output is below the<br>Low RF Power threshold. |                                                                                            |
| 11                                                                                       | HP           |                                                                                                             | normally HIGH, goes LOW during fault.                                                      |
| 12                                                                                       | MOD IN ANALC | G Controls the ou                                                                                           | tput power level in A05 and R05 models                                                     |
| 13                                                                                       | FAULT RESET  |                                                                                                             | e driver from a fault condition. This line should not be eat some of the fault conditions. |
| 14                                                                                       | FPS TRG      | Triggers a suppression                                                                                      | n pulse on a RISING edge.                                                                  |
| 15                                                                                       | MOD IN FIXED | Turns the drive                                                                                             | er off for the duration set by the pulse width control.                                    |
| 16                                                                                       | MOD IN VARIA | BLE Turns the drive                                                                                         | er off while this input is HIGH.                                                           |
| 17                                                                                       | SYNC OUT     | Outputs a signal synch                                                                                      | nronized to the modulation output.                                                         |
| 18-19                                                                                    | NC           | No connection.                                                                                              |                                                                                            |
| 20                                                                                       | SHUTTER      | 0.3 sec delay. Opens                                                                                        | on fault. Capable of sinking 1 amps at 28 volts maximum.                                   |
| 21 -24                                                                                   | NC           | No Connection                                                                                               |                                                                                            |
| 25                                                                                       | GND          | Ground.                                                                                                     |                                                                                            |
| Note: Some Control Signals Shown on Outline Drawing are Not Available on Standard Units. |              |                                                                                                             |                                                                                            |


| INDICATORS: |  |
|-------------|--|

| ATORS:          | Located on front panel                                                                                                       |
|-----------------|------------------------------------------------------------------------------------------------------------------------------|
| Power           | Power Indicator – The module has 28V applied on the DC connector.                                                            |
| Low Power       | Faults after 0.3 second, power below LP Set Point.<br>Resets on power adjusted above Set Point.                              |
| High Power      | Faults when power above HP Set Point.<br>Reset required after removing fault.                                                |
| High VSWR       | Faults when reflected power above VSWR Set Point.<br>Reset required after removing fault.                                    |
| QS Temp         | Faults on open Thermostat.<br>Resets on closed Thermostat. (Q-Switch below set temperature)                                  |
| DRV Temp Driver | The internal temperature of the module has reached 60°C. The driver will remain in this fault condition until it cools down. |
|                 |                                                                                                                              |

| ADJUSTMENTS:                                                                             | Located Inside Unit Through Holes in Module Top Cover                                                                                                                                                                         |  |
|------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| RF Power Level Adjustment                                                                | Adjusts the output RF Power.                                                                                                                                                                                                  |  |
| LP Set Point                                                                             | Adjusts the minimum power threshold. If the module's output goes below this set value, the low power warning light will turn on, but the driver will continue to output power. This is a warning, not a true fault condition. |  |
| HP Set Point                                                                             | Adjusts the maximum power threshold for the module. If the output rises above this threshold, the module will cease output until it is reset.                                                                                 |  |
| VSWR Set Point                                                                           | Adjusts the module's tolerance for a mismatched load connected to RF Out.<br>If a mismatch is detected, the driver will cease outputting power until reset.                                                                   |  |
| Pulse Width                                                                              | Adjusts the length of time the driver outputs no RF energy after receiving a trigger. 1 $\mu s$ to 14 $\mu s.$                                                                                                                |  |
| The following adjustment is not used on units configured with FPS or PPK:                |                                                                                                                                                                                                                               |  |
| Threshold                                                                                | Sets the point below which the analog voltage is ignored and the system output is shut off.                                                                                                                                   |  |
| The following adjustments are not used on units configured with Analog Input (A05, R05): |                                                                                                                                                                                                                               |  |
| FPS Start                                                                                | Adjusts the initial power level of the first pulse.                                                                                                                                                                           |  |
| FPS Slope                                                                                | Adjusts how quickly the RF pulses return to their normal level after the FPS has been triggered. 20 $\mu s$ to 300 $\mu s.$                                                                                                   |  |
| FPS Window                                                                               | Adjusts the duration of the suppression pulse cycle. 20 $\mu s$ to 300 $\mu s.$                                                                                                                                               |  |
| Note: Some Adjustments Shown on Outline Drawing are Not Available on Standard Units.     |                                                                                                                                                                                                                               |  |

Page 4 of 11

# Mechanical Dimensions: Dimensions in inches and [mm]

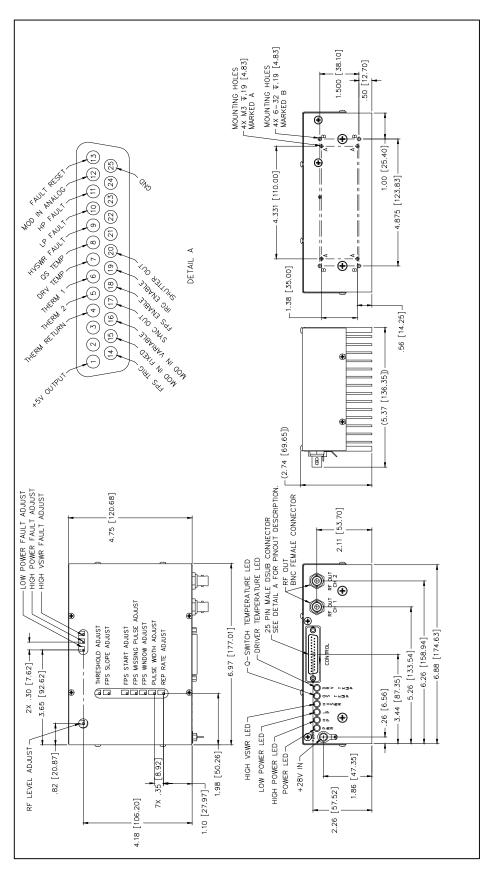

Page 5 of 11


Contact: sales@goochandhousego.com

www.goochandhousego.com

As part of our policy of continuous product improvement we reserve the right to change specifications at any time

# Control Diagrams Figure 2

## MQH0XX-YYDM-ZZZ-2S (HIGH POWER) First Pulse Suppression Control **Connection and Control Diagrams**

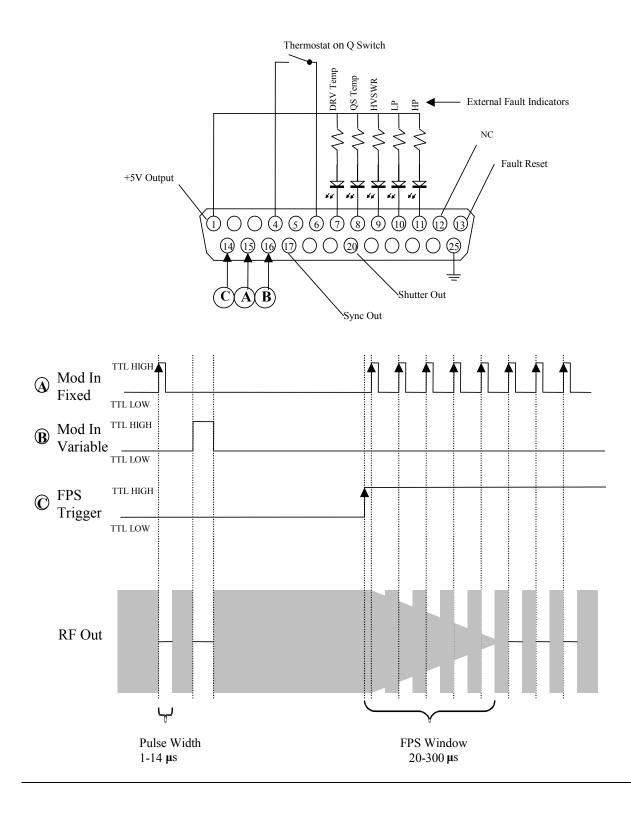



Page 6 of 11

Contact: sales@goochandhousego.com

www.goochandhousego.com


As part of our policy of continuous product improvement we reserve the right to change specifications at any time

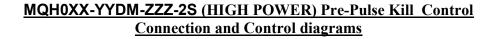

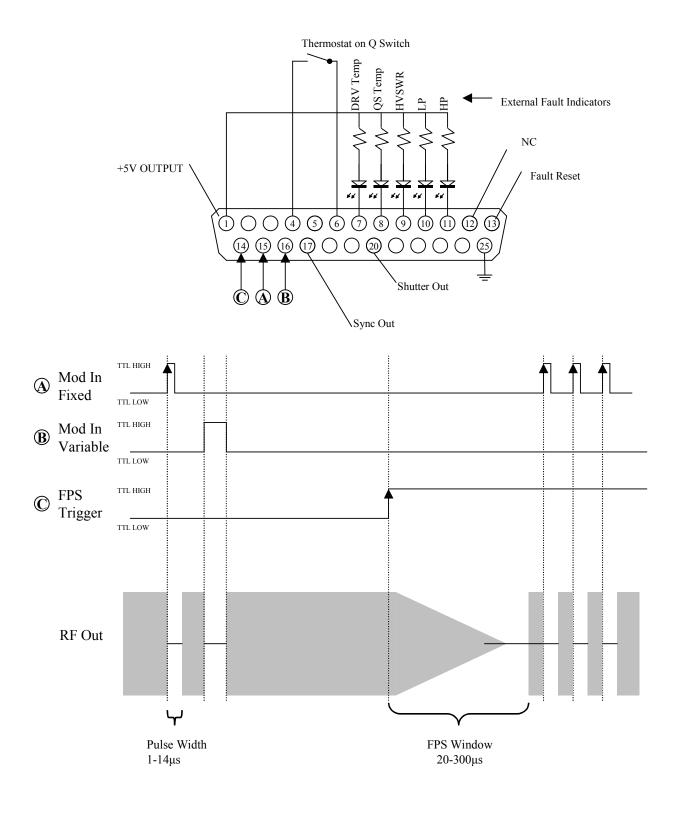

Contact: sales@goochandhousego.com www.goochandhousego.com As part of our policy of continuous product improvement we reserve the right to change specifications at any time


Page 7 of 11

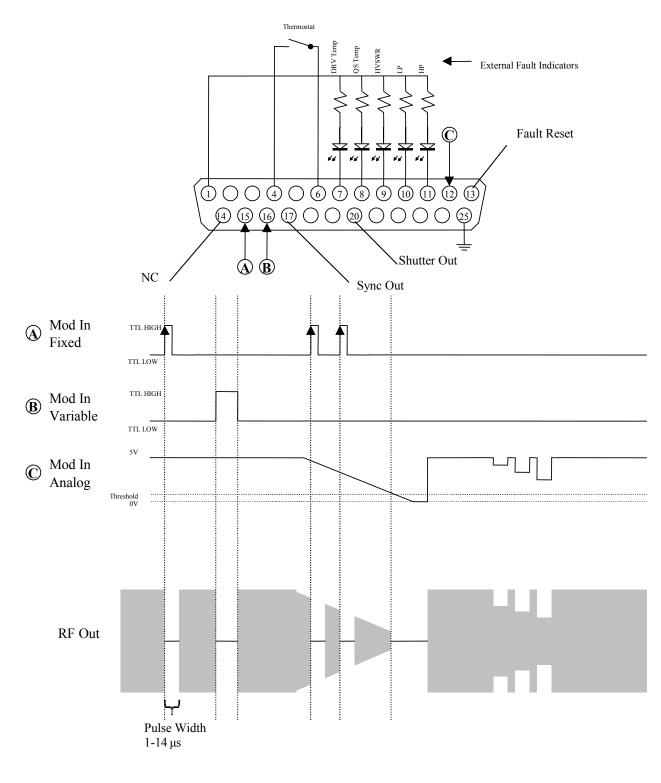

## MQH0XX-YYDM-ZZZ-2S (HIGH POWER) Analog 5 Volt Control Connection and Control Diagrams


Contact: sales@goochandhousego.com www.goochandhousego.com As part of our policy of continuous product improvement we reserve the right to change specifications at any time

Page 8 of 11

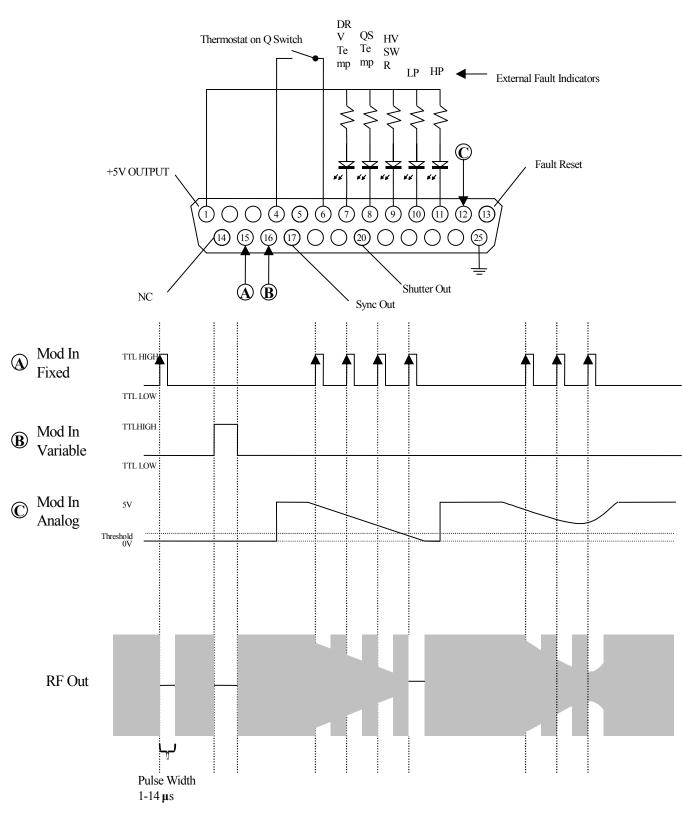

#### MQH0XX-YYDM-ZZZ-2S (HIGH POWER) RF Switch to Analog 5 Volt Control Connection and Control Diagrams

Contact: sales@goochandhousego.com www.goochandhousego.com As part of our policy of continuous product improvement we reserve the right to change specifications at any time

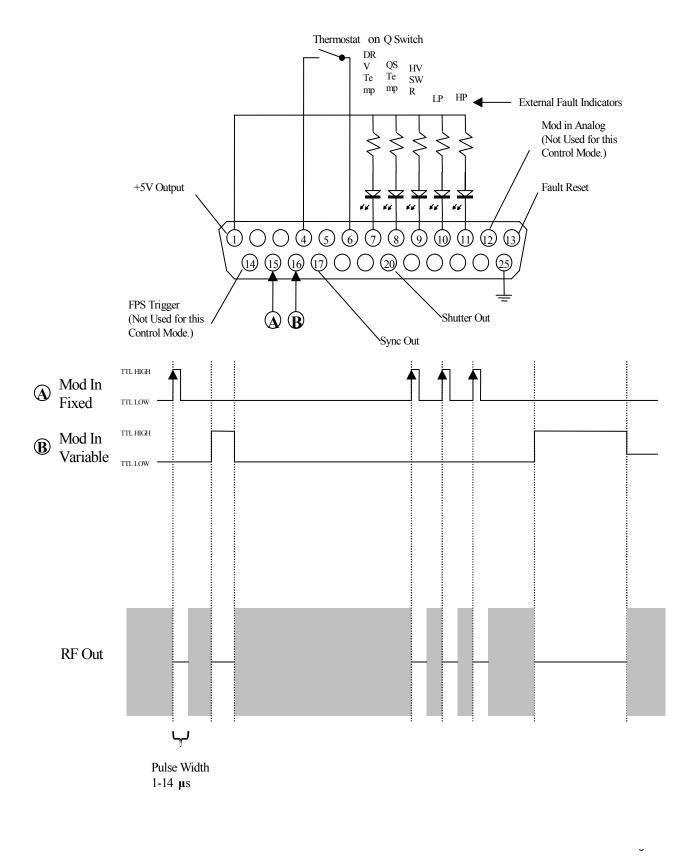

## MQH0XX-YYDM-ZZZ-2S (HIGH POWER) Digital Control Only Connection and Control Diagrams


Contact: sales@goochandhousego.com www.goochandhousego.com As part of our policy of continuous product improvement we reserve the right to change specifications at any time



#### **Ordering Codes:**

Example: MQH027-50DM-A05-2S

A two channel 27 MHz RF Driver with two TTL Digital Modulation inputs (fixed and variable pulse width) and an analog input (A05) which enables control of the RF output power. Designed to Drive two AO Q-Switches requiring 50 watts RF Power or less per channel. Delivered as a RoHS compliant, forced air cooled OEM Module.

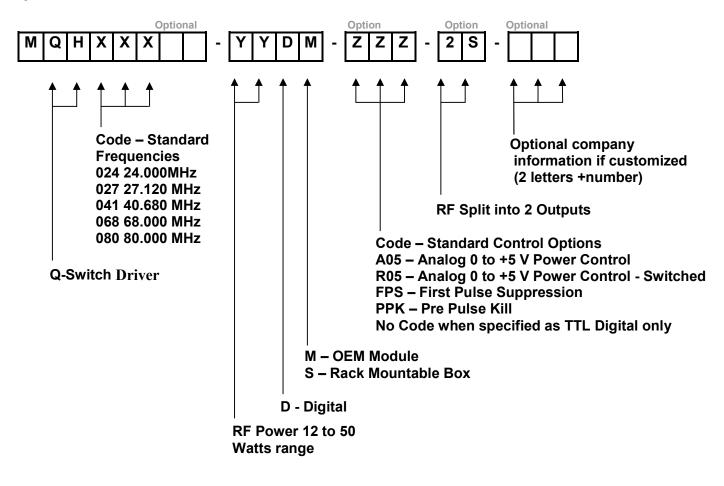

#### **Technical Assistance & Customization**

Our Engineering and Sales team are available to discuss your requirements and will assist you in selecting the most appropriate acousto-optic Q-Switch/ Driver combination for your application.

www.goochandhousego.com

As part of our policy of continuous product improvement we reserve the right to change specifications at any time