

760 - 830 nm
830 - 920 nm
920 - 1100 nm
1100 - 1300 nm
1300 - 1450 nm
1450 - 1650 nm
1650 - 1850 nm
1850 - 1900 nm
1900 - 2200 nm
2200 - 2600 nm
2600 - 2900 nm
2900 - 4000 nm
4000 - 4600 nm
4600 - 5300 nm
6000 - 14000 nm

DFB laser diodes from 1450 nm to 1650 nm


nanoplus single mode laser diodes

nanoplus is the only manufacturer worldwide routinely providing single and multi mode lasers at any wavelength from 760 to 6000 nm. At wavelengths up to 14 μm, QCLs complete nanoplus' laser portfolio. Our patented distributed feedback laser diodes deliver single mode emission with well defined optical properties enabling a wide range of applications.

nanoplus lasers operate reliably in tens of thousands of installations worldwide, including chemical and metallurgical industries, gas pipelines, power plants, medical systems, airborne and satellite applications.

key features

- ✓ very high spectral purity
- ✓ narrow linewidth typically < 3 MHz
- ✓ excellent reliability
- ✓ wide variety of packaging options
- ✓ customer-specific designs available

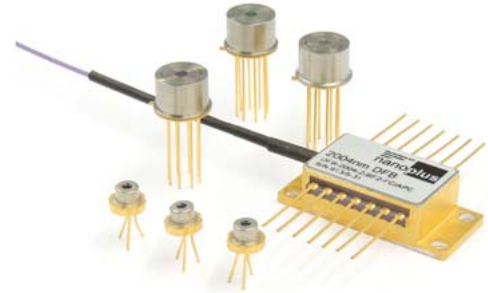

application areas

- ✓ high performance gas sensing for process and environmental control
- ✓ precision metrology
- ✓ atomic clocks
- ✓ spectroscopy
- ✓ space technology

nanoplus lasers with excellent performance are specifically designed and characterized to fit your needs. This data sheet summarizes typical properties of nanoplus DFB lasers in the range from 1450 nm to 1650 nm. In this wavelength range e.g. NH₃, C₂H₂, CO and H₂S can be detected with high sensitivity. Overleaf data is given as an example for DFB lasers permitting high sensitivity ammonia sensing.

general ratings (T = 25 °C)	symbol	unit	typical
optical output power	P _{out}	mW	5
typical maximum operating voltage	V _{op}	V	2
forward current	I _f	mA	70
side mode suppression ratio (SMSR)		dB	> 35

On request, lasers with specifically optimized properties, e.g. higher output power, are available.

laser packaging options

TO5.6 header with or without cap

TO5 with TEC and NTC

butterfly housing with SM and PM fiber

For dimensions and accessories, please see www.nanoplus.com
 Further packaging options available on request.



device protected by
 US patent 6.671.306
 US patent 6.846.689
 EU patent EP0984535

nanoplus
 Nanosystems and Technologies GmbH
 Oberer Kirschberg 4
 D-97218 Gerbrunn

phone: +49 (0) 931 90827-0
 fax: +49 (0) 931 90827-19
 email: sales@nanoplus.com
 internet: www.nanoplus.com

© copyright nanoplus GmbH 2017, all rights reserved.
 nanoplus GmbH reserves the right to modify these specifications at any time without notice and is not liable for errors.



nanoplus DFB laser diodes at 1512 nm

A wide variety of gas molecules exhibit characteristic absorption lines in the near infrared. DFB lasers at 1512 nm are highly suited for sensitive detection of small ammonia concentrations. For this application, highly stable laterally and longitudinally single mode lasers are required.

This data sheet reports performance data of nanoplus DFB lasers at this wavelength. Similar performance data are obtained in the entire wavelength range from 1450 nm to 1650 nm. For examples of performance data of nanoplus lasers in other wavelength ranges, please see www.nanoplus.com or contact sales@nanoplus.com

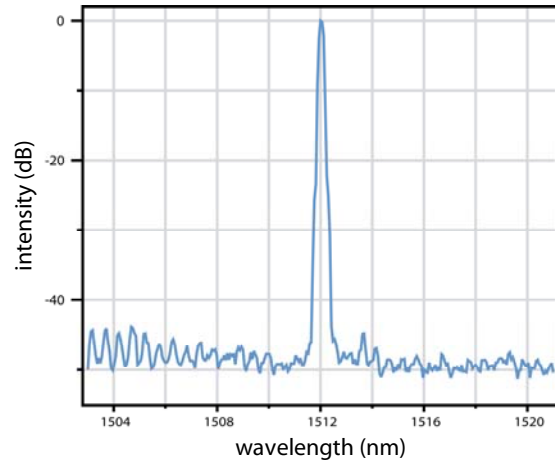


Fig. 1
 Room temperature cw spectrum of a nanoplus DFB laser diode operating at 1512 nm

In many applications, temperature and/or current variations are used to adjust the laser emission precisely to the target wavelength.

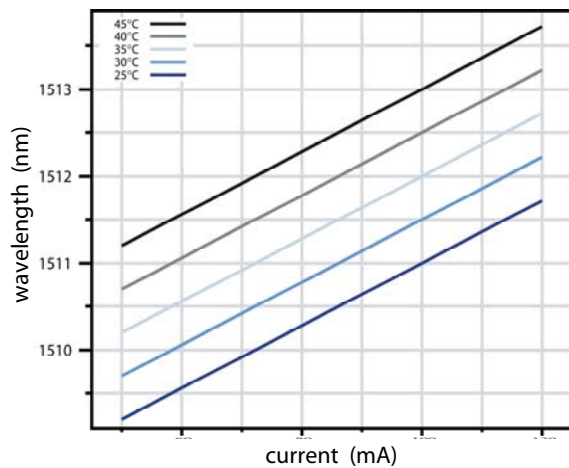


Fig. 2
 Mode hop free tuning of 1512 nm based DFBs by current variation at different temperatures

electrooptical characteristics (T = 25 °C)	symbol	unit	min	typ	max
peak wavelength	λ	nm	1511	1512	1513
threshold current	I_{th}	mA	10	30	55
temperature tuning coefficient	C_T	nm / K	0.07	0.10	0.14
current tuning coefficient	C_I	nm / mA	0.008	0.015	0.02
slow axis (FWHM)		degrees	20	30	40
fast axis (FWHM)		degrees	40	50	60
emitting area	W x H	$\mu\text{m} \times \mu\text{m}$	2 x 1	3 x 1.5	5 x 2
storage temperatures	T_S	°C	- 40	+ 20	+ 80
operational temperature at case	T_c	°C	- 20	+ 25	+ 50

We will be happy to answer further questions. Please contact us at sales@nanoplus.com

