

Integrating Sphere
Power Sensor Head
with Extended
InGaAs Detector S148C



## **Description**

The S148C Integrating Sphere Power Sensor Head with Extended InGaAs Detector is designed to measure the optical power of an incoming beam independent of the divergence and beam shape. This power meter sensor head has an optical power working range from 1  $\mu$ W to 1000 mW and a wavelength range of 1200 nm to 2500 nm. It is designed for fiber-coupled and free space applications. The S148C is compatible with all current Thorlabs power meter display units. A non-volatile memory in the sensor connector contains sensor information data and the NIST and PTB traceable calibration data.

A SM1 (1.035"-40) thread adapter and FC fiber adapter are included with the S148C; other fiber adapters for SMA, LC, ST and SC connectors can be purchased separately as accessories. 8-32- and M4-threaded tapped holes are provided for mounting to  $\emptyset$ 1/2" posts and post holders.

## **Specifications**

Detector Type External Externa	ended InGaAs Photodiode 1200 - 2500 nm 1 µW - 1000 mW 1 kW/cm <sup>2</sup>
Optical Power Working Range Max Average Power Density Max Pulse Energy Density	1 μW - 1000 mW
Max Average Power Density  Max Pulse Energy Density	
Max Pulse Energy Density	1 kW/cm²
	I KYY/CIII*
Linoarity	1 J/cm <sup>2</sup>
Linearity	±0.5%
Resolution <sup>a</sup>	1 nW
Measurement Uncertainty <sup>b</sup>	±5%
Typical Application Fiber Lase	ers / Low and Mid Power Lasers
Laser Types Diode, Ti-Sapphir	re, He-Cd, Argon Ion, Krypton Ion, Dye
Coating / Diffuser Zenith®	PTFE Integrating Sphere (Ø1")
Cooling	Convection
Head Temperature Measurement	NTC Thermistor 4.7kΩ
Console Compatibility PM100D, PM	100A, PM100USB, PM200, PM320E
Response Time	<1 µs
Sensor Dimensions	Ø45 x 30.5 mm
Active Detector Area	Ø1 mm
Input Aperture	Ø5 mm
Cable Length	1.5 m
Connector	Sub-D 9-Pin Male
Weight	0.2 kg
	-32 & M4 Tapped Holes
	eaded (1.035"-40) Removable Adapter
Fiber Adapters (Optional) FC (I	ncluded), SC, LC, SMA, ST


a. Measured with PM100D console in a low bandwidth setting.

Please note that the S148C power meter head is not compatible with the older Thorlabs power meter consoles (PM100, PM300, PM300E, S100).


b. Beam diameter > 1 mm




# Typical Response Graph

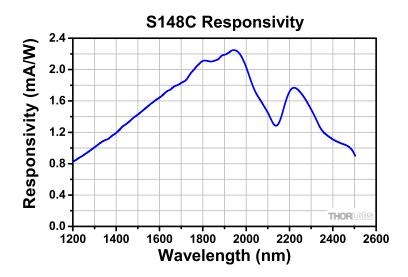

# **Drawings**

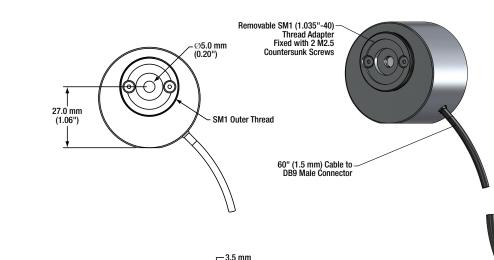

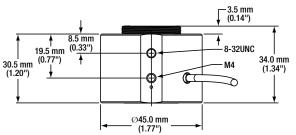



Connector Pin Diagram

EEPROM Data
PD Anode & NTC Ground
PD Cathode
EEPROM Ground
NTC

Self Fixing Mechanism



### Available Accessories

S120-SMA SMA Fiber Adapter
S120-SC SC Fiber Adapter
S120-LC LC Fiber Adapter
S120-ST ST Fiber Adapter

**S120-FC** FC Fiber Adapter (Included)

The S148C is equipped with 8-32 and M4 tapped holes for compatibility with Thorlabs' imperial and metric post and post holder assemblies. When used with the removable SM1 (1.035"-40) thread adapter, the S148C is also compatible with SM1-threaded (1.035"-40) components.

### Cleaning and Maintenance

There are no serviceable parts in the S148C head. The housing may be cleaned by wiping with a soft damp cloth. The integrating sphere inner surface cannot be cleaned, do not touch this surface. Gently blow off any debris using compressed air. If you suspect there is a problem with your S148C, please contact Thorlabs and an engineer will be happy to assist you.

As long as the sensor has not been exposed to excessive optical power (please pay attention to the maximum ratings in the technical specifications), the calibration should be very stable over long periods of time (well over a year). To keep the accuracy and performance of the S148C, Thorlabs recommends a yearly recalibration, starting one year after purchase.

### **Precautions and Warranty Information**

These products are ESD (electro static discharge) sensitive and as a result are not covered under warranty. In order to ensure the proper functioning of a photodiode care must be given to maintain the highest standards of compliance to the maximum electrical specifications when handling such devices. The photodiodes are particularly sensitive to any value that exceeds the absolute maximum ratings of the product. Any applied voltage in excess of the maximum specification will cause damage and possible complete failure to the product. The user must use handling procedures that prevent any electro static discharges or other voltage surges when handling or using these devices.

Thorlabs, Inc. Life Support and Military Use Application Policy is stated below:

THORLABS' PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS OR IN ANY MILITARY APPLICATION WITHOUT THE EXPRESS WRITTEN APPROVAL OF THE PRESIDENT OF THORLABS, INC.

#### As used herein:

- 1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into the body, or (b) support or sustain life, and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury to the user.
- 2. A critical component is any component in a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system or to affect its safety or effectiveness.
- 3. The Thorlabs products described in this document are not intended nor warranted for usage in Military Applications.

